

Reset Handle Locking Direction

This feature is when you need to change the direction of the latch to right or left.

1. Enter Administrator pin code
2. Press “*” twice
3. Press “2”
4. Lastly press “*” to finalize the locking direction