

Enable Privacy Mode

*Note: Privacy mode prevents registered pin codes and fingerprints from being used to unlock the door from the outside. Privacy mode disables once the door is unlocked from the inside.

1. To enable Privacy Mode you will need to locate the open/close button on the lock from the inside



2. You are going to hold button for 3 seconds to activate the privacy mode function
3. The lock will ring. That is how you know Privacy mode is enabled