

Enable Double Authorization

***Note:** This feature is a function that will open the lock after the registered pin code and a fingerprint

1. Enter Administrator pin code
2. Press “*”
3. Press “5” to Activate double authorization
4. To “8” to Deactivate double authorization