

## **Enable Door Lock Alarm Setting**

**\*Note:** If the door remains open, the lock will beep for 1 minute. This is to ensure your security.

1. Enter Administrator pin code
2. Press “ \* “
3. Press “2” to Activate alarm setting
4. To “0” to Deactivate alarm setting