

Enable Auto-Lock Time Setting

With this feature you will be able to set the lock to automatically lock when the door is closed

1. Enter your Administrator pin code
2. Press “*” twice
3. Press “1”
4. Enter the time you want to set. It should be between 5-180 seconds
5. Press “#”
6. Auto-lock time setting is enabled