

## Add One Time Pin Code on Lock

1. Slide up to open the back panel where the batteries are located
2. Locate and press the “Register” button  for 3 seconds
3. Enter Administrator code. If you have not changed the Administrator code. It should be “123456.”
4. Press “#”
5. Press “4”
6. Enter one time pin code. It should be 6 digits
7. Press “#”
8. One Time Pin code is created

## Delete One Time Pin Code on Lock

1. Slide up to open the back panel where the batteries are located
2. Locate and press the “Register” button  for 3 seconds
3. Enter Administrator code. If you have not changed the Administrator code. It should be “123456.”
4. Press “#”
5. Press “4”
6. Press “\*”
7. One Time pin code is deleted