


support@solitysmartlocks.zendesk.com<https://smartlocksolity.com>

Change Administrator Pin Code

1. Slide open the back panel where the batteries are located
2. Locate and press the "Register" button 
3. Enter Administrator code. It should be "123456."
4. Press "#"
5. Press "0"
6. Enter a new administrator pin code. It should be 6-12 digits.
7. Press "#"
8. New Administrator pin code has been created