

NOTE: YOU MUST CHANGE THE DEFAULT MASTER CODE TO YOUR PERSONAL MASTER CODE BEFORE PROGRAMMING THE AT10/AT1 SERIES.

HOW TO ADD A ONE-TIME CODE

1. First you are going to press the “SOLITY” button two (2) times. The “SOLITY” button will light up with a steady blue light.
2. You are then going to enter your master code.
3. After that you will press the “SOLITY” button one (1) time and the “SOLITY” button will light up with a still green light.
4. You are now going to press the number 7, the “SOLITY” button will flash with a green light one (1) time.
5. At this time, you will create a one-time code with at least six (6) digits and no more than eight (8) digits.
6. Next you will press the “SOLITY” button and the “SOLITY” button will flash with a green light one (1) time
7. Last but not least, Enter the one-time code you have just created.
8. Finally, press the “SOLITY” button one (1) time, the “SOLITY” button will flash with a green light one (1) time and you have successfully added a one-time code.