

Note: Before you start Programming the AT10/AT1 series lock, ensure that you change the master code before you start programming the AT10/AT1 series lock.

How to set auto lock time delay

1. First you are going to press the “SOLITY” button two (2) times. The “SOLITY” button will light up with a steady blue light.
2. You are then going to enter your master code.
3. After that you will press the “SOLITY” button one (1) time and the “SOLITY” button will light up with a still green light.
4. You are now going to press the number eight (8), the “SOLITY” button will flash with a green light one (1) time.
5. Next, enter the amount of seconds you would like the door to auto lock for, starting from ten (10) seconds to ninety-nine (99) seconds.
6. Finally, you are going to press the “SOLITY” button to confirm. The green light will flash one (1) time.