

Note: Before you start Programming the AT10/AT1 series lock, ensure that you change the master code before you start programming the AT10/AT1 series lock.

How to enable and disable silent mode

1. First you are going to press the “SOLITY” button two (2) times. The “SOLITY” button will light up with a steady blue light.
2. You are then going to enter your master code.
3. After that you will press the “SOLITY” button one (1) time and the “SOLITY” button will light up with a still green light.
4. You are now going to press the number four (4), the “SOLITY” button will flash with a green light one (1) time.
5. **To Enable silent mode:**
 - a. Follow steps one (1) - four (4) then press the number one (1) to enable, the green light will flash one time on the “SOLITY” button.
 - b. After that press the “SOLITY” button to confirm, the green light will flash one (1) time
6. **To Disable silent mode:**
 - a. Follow steps one (1) - four (4) then press the number two (2) to disable, the green light will flash one (1) time.
 - b. After that press the “SOLITY” button to confirm, the green light will flash one (1) time